


PlayStation Controller Functions

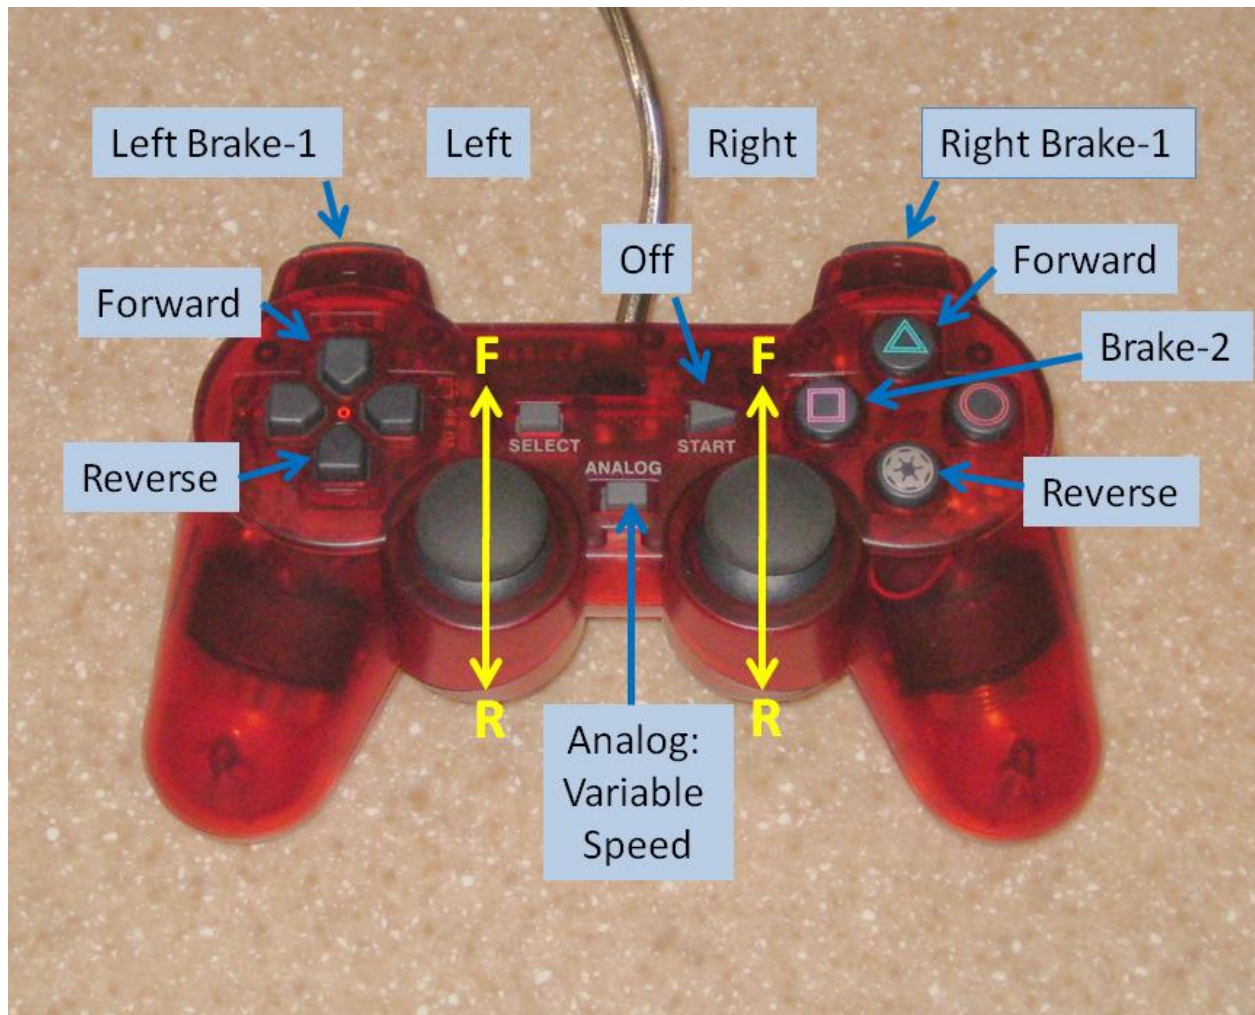

The ANALOG button toggles between digital and analog mode. An LED in the unit will glow dimly when in analog mode.

In Digital Mode, all Forward and Reverse commands are single speed.

In Analog Mode, the joystick position determines the speed; the Forward/Reverse buttons still only provide on/off control.

Left Brake 1: Applies brake to Left wheel. Overrides all forward and reverse commands. Activated only while button is pressed.

Right Brake 1: Applies brake to right wheel. Overrides all forward and reverse commands. Activated only while button is pressed.

Brake 2: Applies brake to both left and right wheel whenever there is no Forward or Reverse command. Press to activate, press to deactivate.